


SA1 - SWANSEA - MARINE LICENCE & WFD SCREENING/ ASSESSMENT.

DAMAGED CONCRETE AND DEPRESSED AREA TO LANDWARD



REMOVE DAMAGED CONCRETE TO MAKE SAFE.

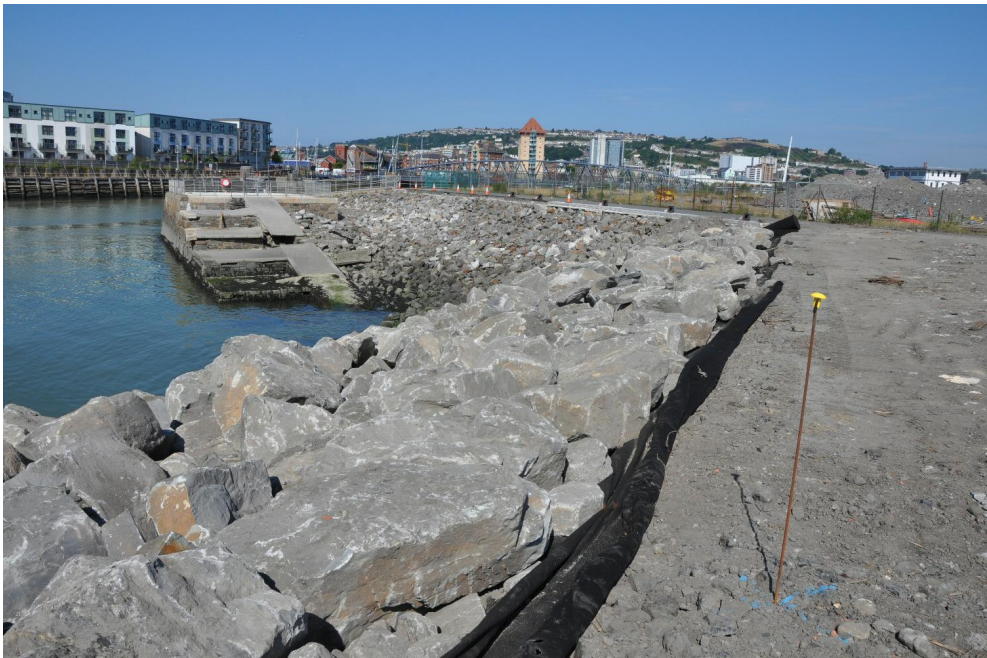

INFILL LOW AREA WITH CLEAN STONE - RIP RAP (NO FINES)



ALL WORKS UNDERTAKEN IN THE DRY - TIDE OUT.