










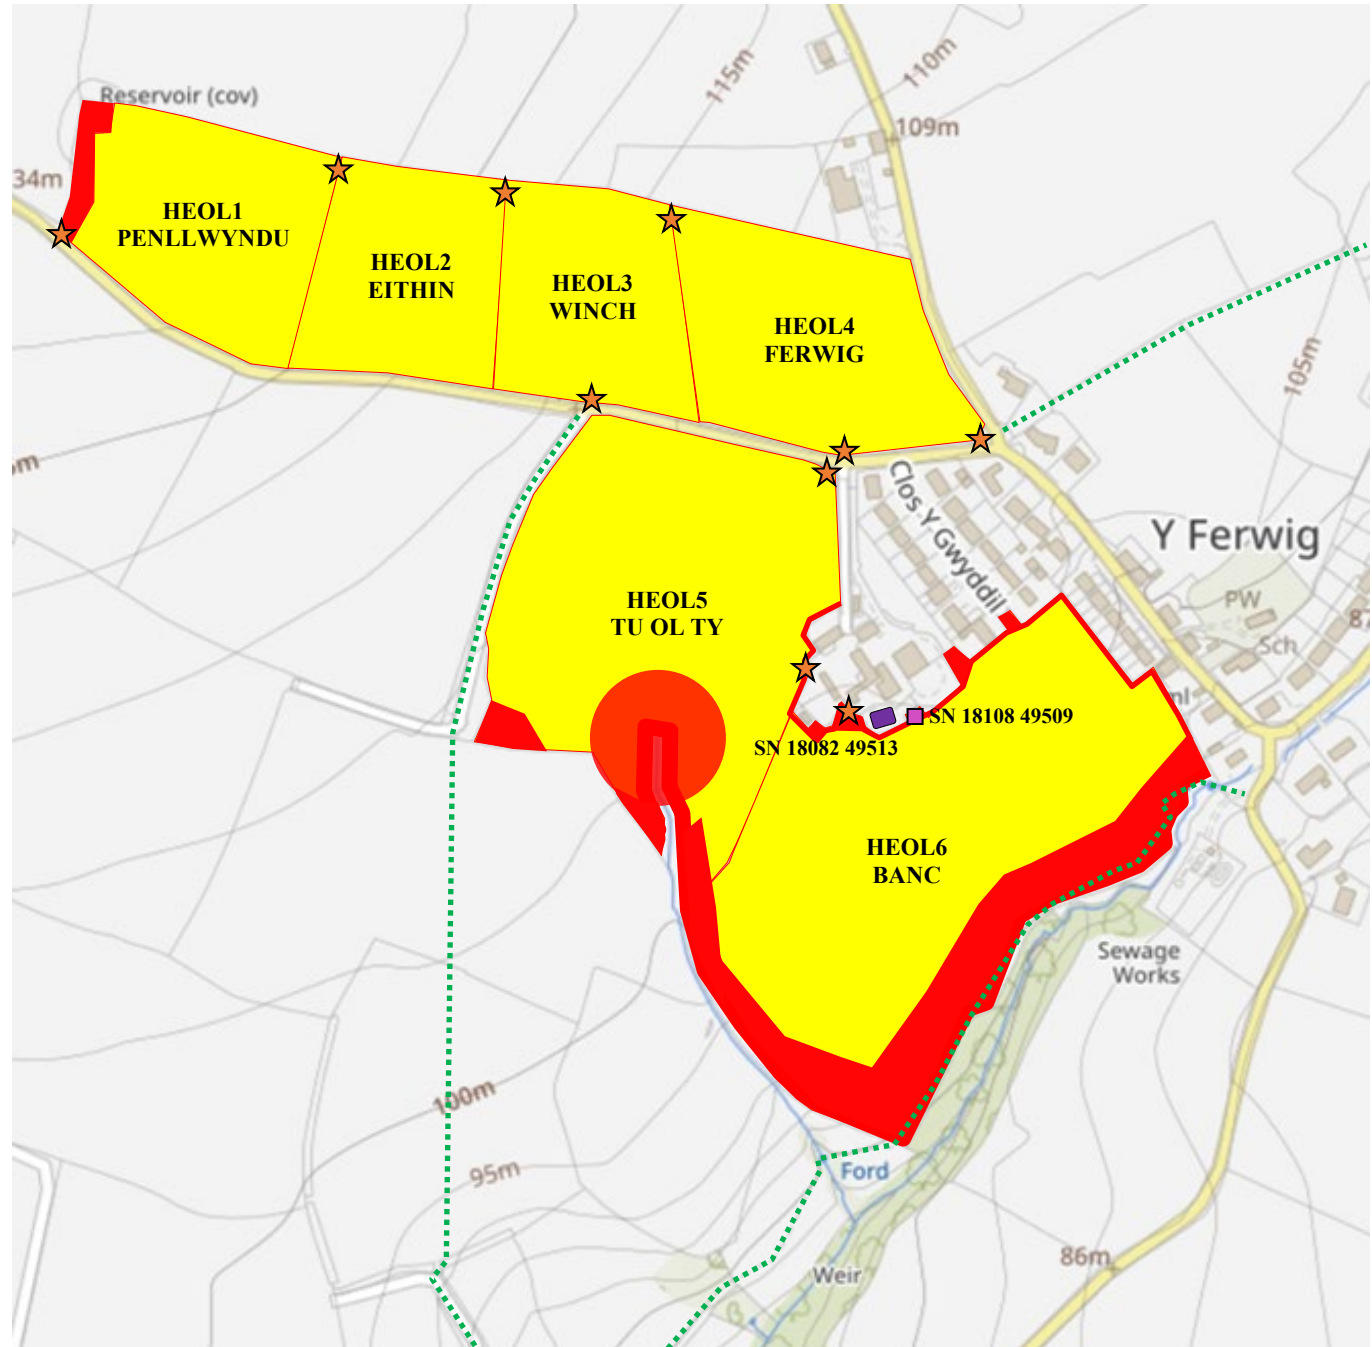
## Pencefen Farm (Heolgwyddil) – Location Map











### Map Key

	Non-Spreadable Section of Field
	No Spread Area
	Suitable for Spreading
	Water Course
	Foot Path
	Spring, Well or Bore Hole (50 Metres Buffer)
	Gateway
	Nurse Tank
	Slurry Lagoon

**Name:** A. Morgan  
**Map Grid Ref:** SN 17920 49560  
**Farm ID:** Pencefen Farm (Heolgwyddil)  
**Farm Post Code:** SA43 1QB




### Map Key







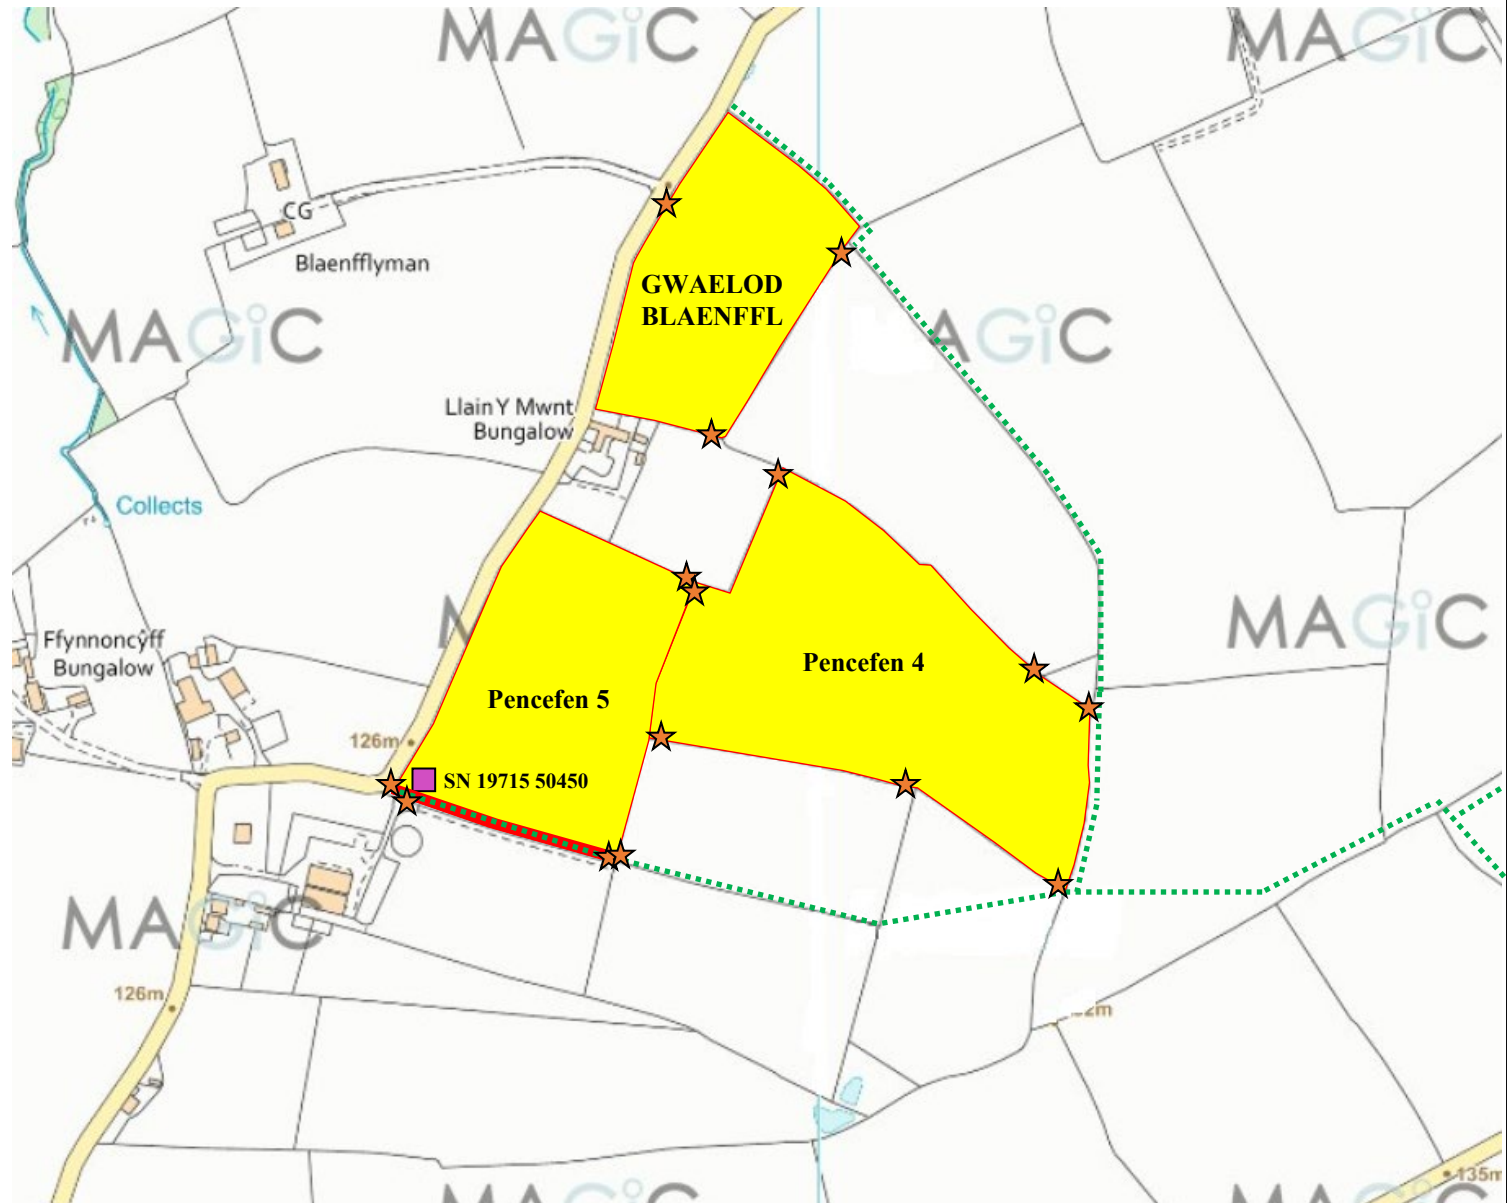

	Non-Spreadable Section of Field
	No Spread Area
	Suitable for Spreading
	Water Course
	Foot Path
	Spring, Well or Bore Hole (50 Metres Buffer)
	Gateway
	Nurse Tank

Name: A. Morgan  
 Map Grid Ref: SN 20032 50518  
 Farm ID: Pencefen Farm  
 Farm Post Code: SA43 1QB

### Pencefen Farm – Location Map




### Map Key



	Non-Spreadable Section of Field
	No Spread Area
	Suitable for Spreading
	Water Course
	Foot Path
	Spring, Well or Bore Hole (50 Metres Buffer)
	Gateway
	Nurse Tank

Name: L. Jones  
 Map Grid Ref: SN 22859 50966  
 Farm ID: Ty Gwyn Farm  
 Farm Post Code: SA43 1PL

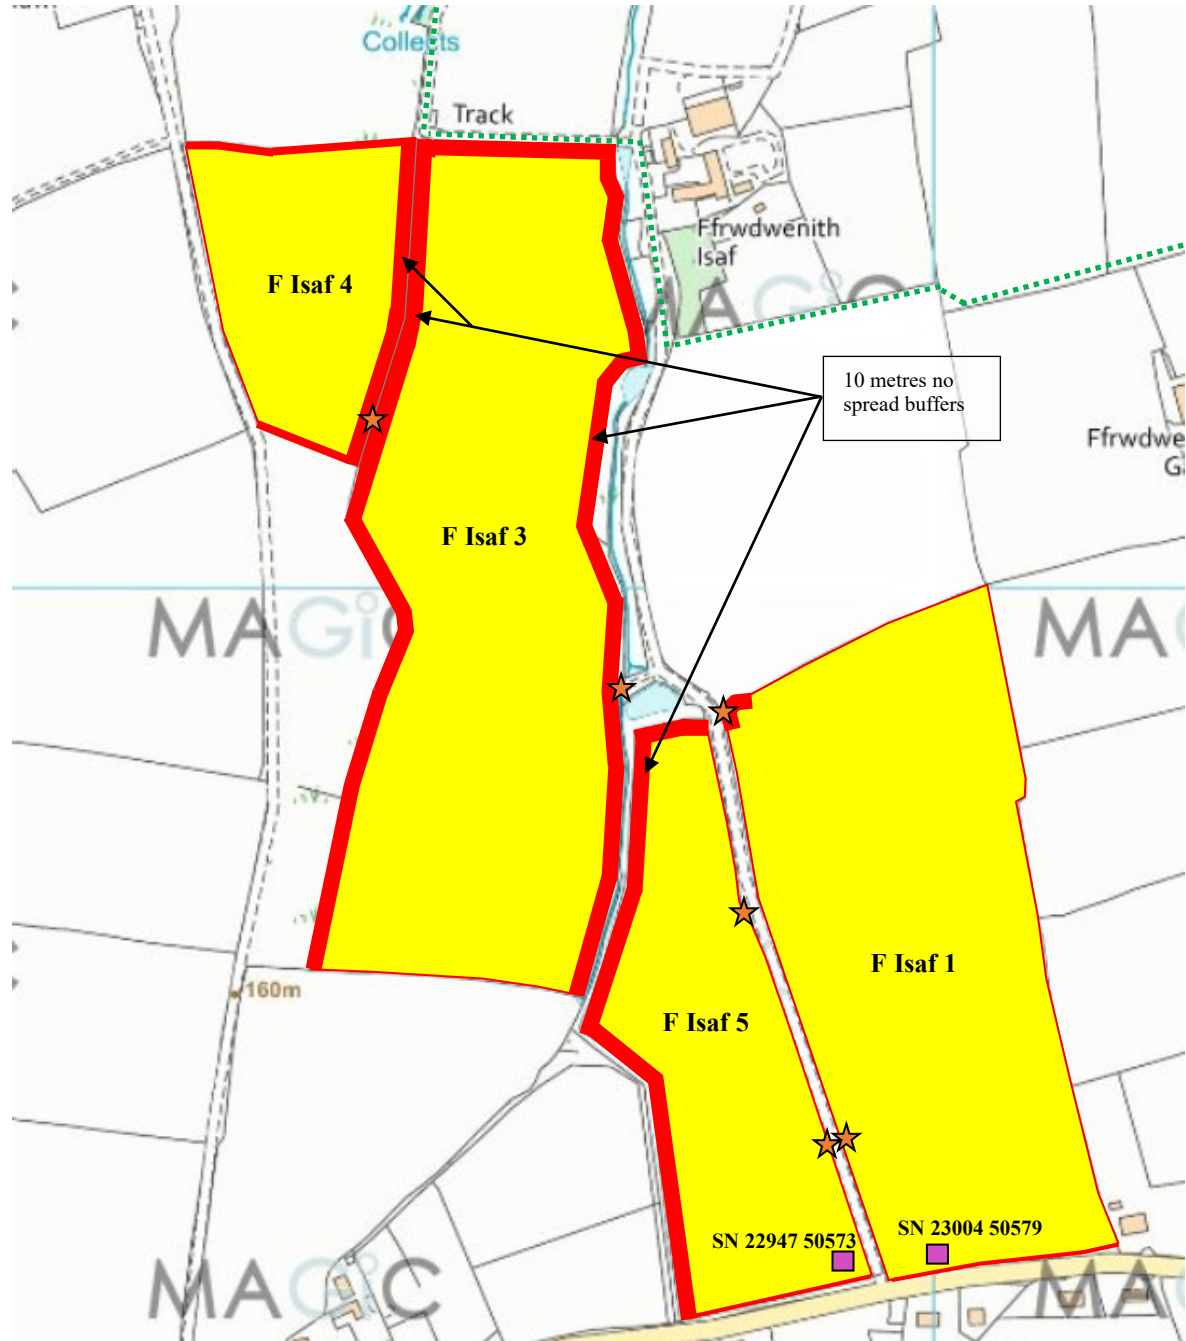
### Ty Gwyn Farm - Location Map



### Map Key

	Location of Fields
	Potential Sensitive Receptors Within 250 Metres of Fields – Springs, Wells

### Ty Gwyn Farm – Potential Sensitive Receptors – Springs & Wells – Map

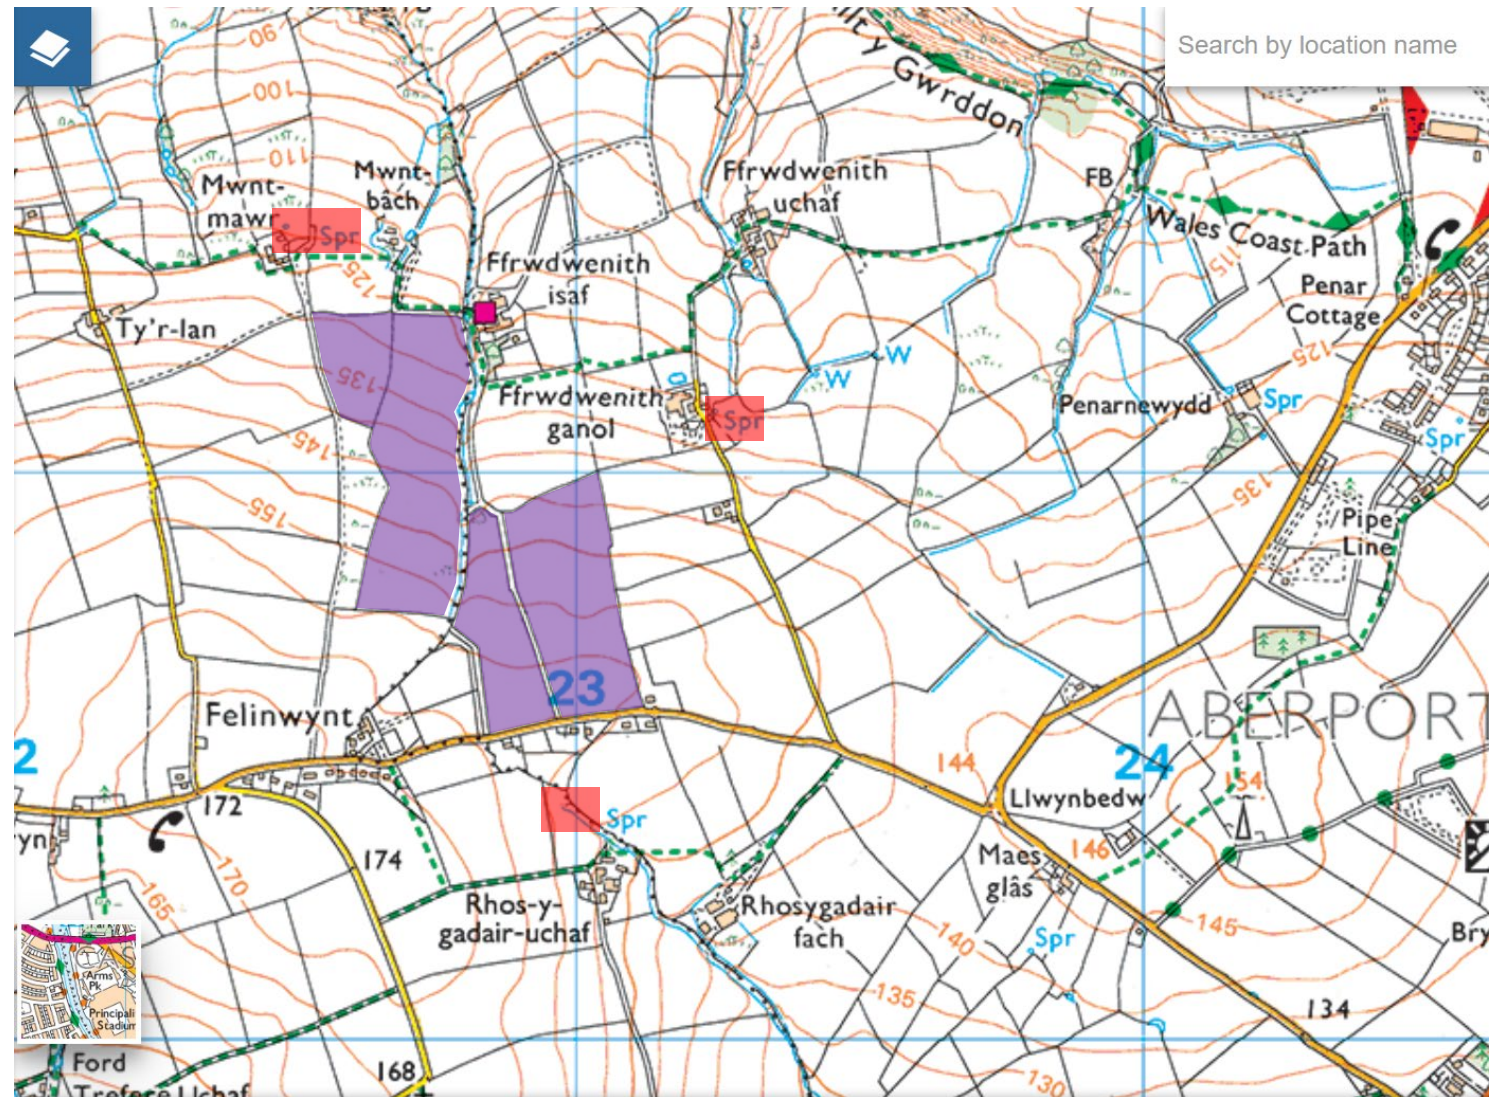

Name: L. Jones  
Map Grid Ref: SN 23085 50808  
Farm ID: Ty Gwyn Farm  
Post Code: SA43 1PL