


NOTES

1. Move minimum amount of mud needed to access works and to work safely
2. Spread mud over existing mud where it will be covered by the rising tide
3. Check plant for leaks before leaving plant park daily
4. Refuelling only permitted in agreed location off beach
5. Extraction plan in the event of breakdown required

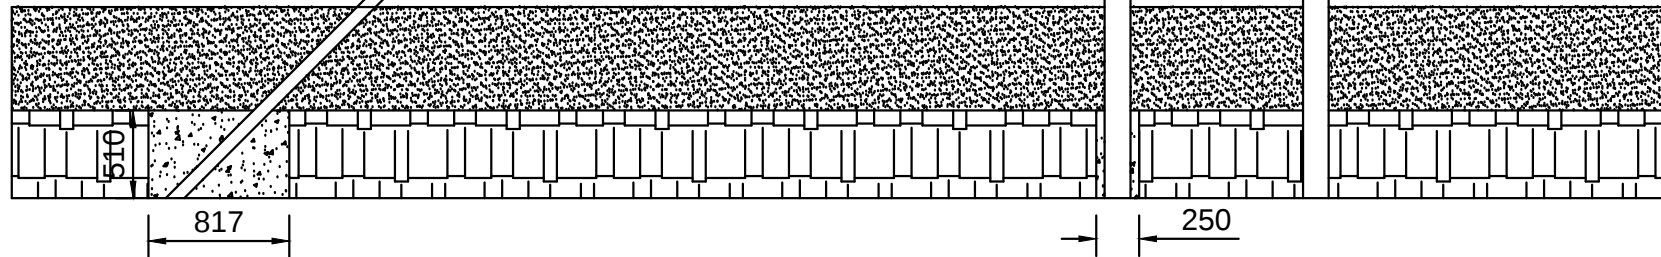

Typical bench pocket excavation

Typical Column pocket excavation

Cast in with Blue Circle Quick Setting Concrete or similar approved.

Ensure tide will not return before cure time of 1 hour will elapse

Use as manufacturers instruction to place in hole dry and add correct amount of water.
 Finished concrete level to be 20mm below top of hole.
 Zero spillage of dry concrete or concretem liquor is permissible
 Used sacks to be immediately bagged to prevent contamination

Manually cover with mud to depth of 100mm after cure time has elapsed

Rev	Revision details	Chkd	Appd	Date
Drawn:	JB			For approval
Design:	DGB/PG			For tender
Chkd:	PG			For construction
Appd:	NA			As constructed
Date:				Other
File ref:				

Donbass Limited

Client	Mrs Jewson
--------	-------------------

Project Name	Replacment walkway at Ynys y Big
--------------	---

Drawing Title	Seabed fixing details
---------------	------------------------------

Original Drawing Size	A1
Scale	NTS
Dimensions	mm

Drawing No	3334.4	Rev	1
------------	--------	-----	---